




# ALPINE SNOWGUARDS

A Division of Vermont Slate & Copper Services, Inc.

Web [www.alpinesnowguards.com](http://www.alpinesnowguards.com)  
E-mail [info@alpinesnowguards.com](mailto:info@alpinesnowguards.com)  
Toll Free Phone 1.888.766.4273  
Toll Free Fax 1.888.766.9994  
289 Harrell Street, Morrisville, VT 05661

## Installation Instructions for #145 Pipe Style Snowguard

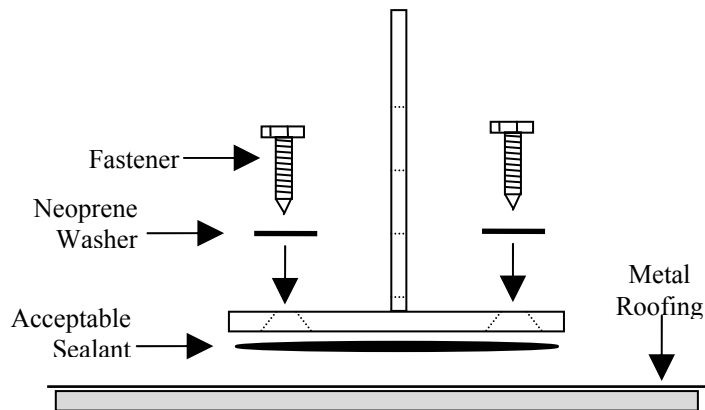

### Snowguard Layout for Pipe Style Brackets

- \* Contact the manufacturer for detailed layout.
- \* Horizontal spacing between brackets should be 48" maximum. This may have to be decreased due to variable conditions.
- \* Do not install runs than 100 feet long without a break to allow for thermal expansion.
- \* First row of snowguards is installed above outer most wall or support of the building.
- \* Tubing is 1" O.D. aluminum.
- \* Brackets are made of aluminum and are available in other metals.
- \* One, two and three pipe systems are available.

Document version 08.02.2004