




ALPINE SNOWGUARDS

A Division of Vermont Slate & Copper Services, Inc.

Web www.alpinesnowguards.com
E-mail info@alpinesnowguards.com
Toll Free Phone 1.888.766.4273
Toll Free Fax 1.888.766.9994
289 Harrell Street, Morrisville, VT 05661

Installation Instructions for #245 Pipe Style Snowguard

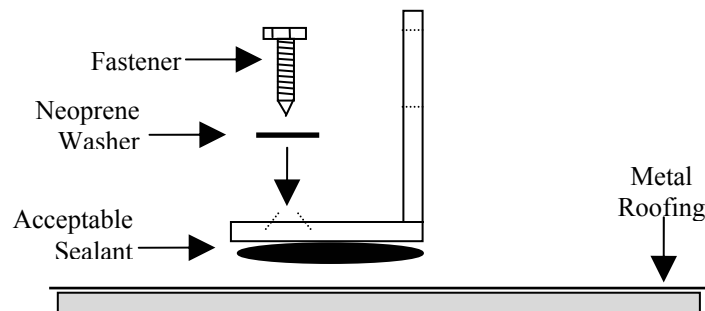

Snowguard Layout for Pipe Style Brackets

- * Contact the manufacturer for detailed layout.
- * Horizontal spacing between brackets should be 48" maximum. This may have to be decreased due to variable conditions.
- * Do not install runs than 100 feet long without a break to allow for thermal expansion.
- * First row of snowguards is installed above outer most wall or support of the building.
- * Tubing is 1" O.D. aluminum.
- * Brackets are made of aluminum and are available in other metals.
- * One, two and three pipe systems are available.

Document version 08.02.2004